

## **HEAVY DUTY WORK BENCH**

## **Tools required: Rubber mallet**

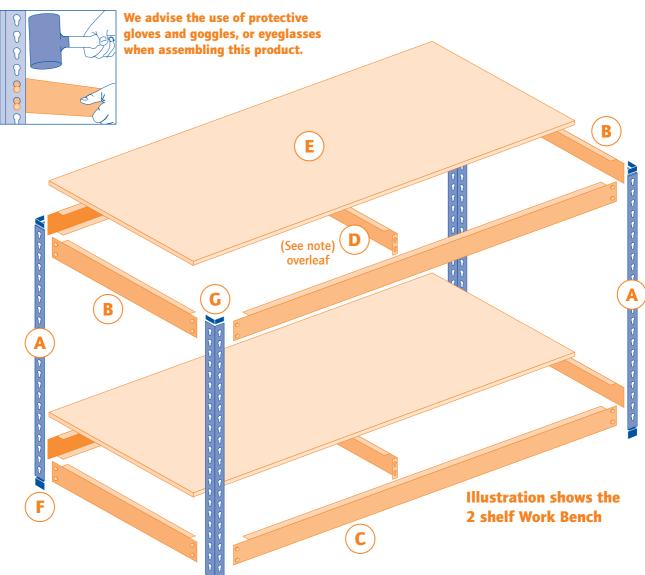

## ASSEMBLY


- 1 Fit plastic feet, **F**, to the bottom of uprights **A**.
- For 2 shelf unit, fit side beams B to uprights
  A as illustrated, the lower beams B, may be fitted at the shelf height of your choice up to 300 mm from the floor.
- **3** For T-Bar and  $1\frac{1}{2}$  shelf unit substitute the lower side beams **B**, for T-Bar side beams **I**.
- **4** Fit front and rear beams **C**. Four of for the 2 shelf unit, three of for the  $1\frac{1}{2}$  shelf unit and two off for the T-Bar unit. For the  $1\frac{1}{2}$  shelf and T-bar fit the T-bar beam **H**.
- Fit the shelf supports D, and place the work surfaces, E and J, in place. Fit the bottom shelf J locating with retainers K.
- 6 Fit 4 plastic caps G, on top of uprights A.

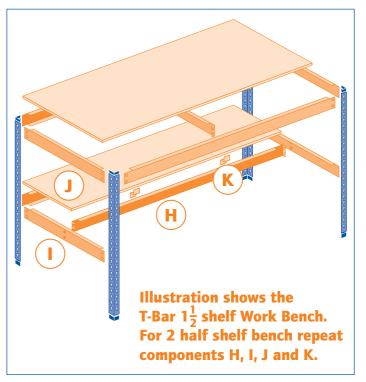

AIW013

## **HEAVY DUTY WORK BENCH**



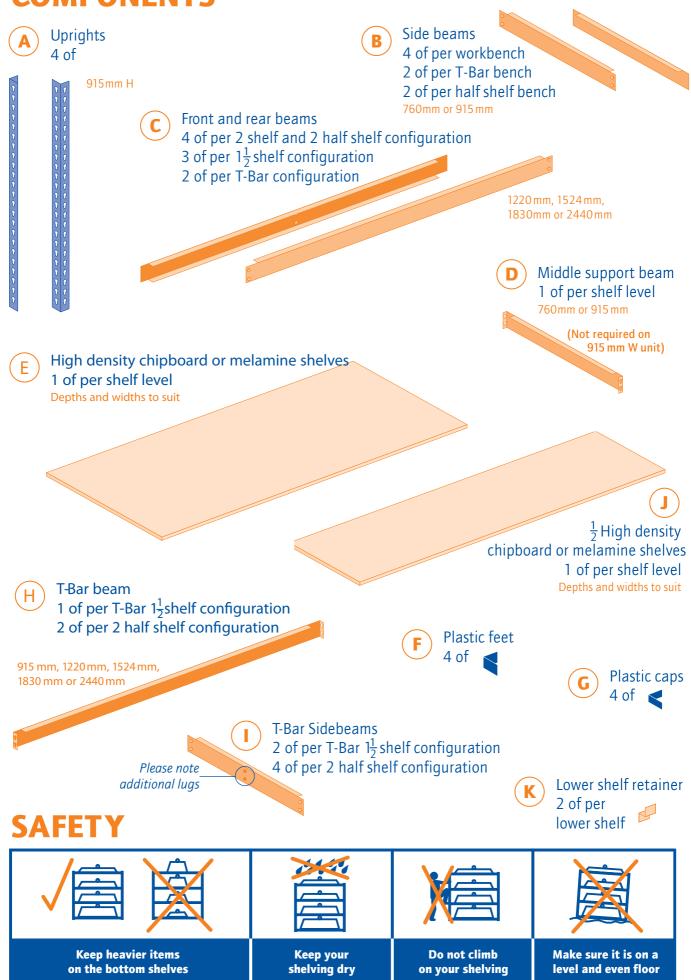

**AIW013**